

Button functionality



How to...	Implementation Button interaction / Button peeps when pressed
Power ON accessory	Locate the button on the left side of the eMotor cover. Press the button once, the tracker peeps as feedback once and stays 1 min active and then powers off.
„Enable FMN pairing mode“	Locate the button on the left side of the eMotor cover. Press the button three times, the bike should be in an upright position and stationary. The tracker peeps three times as feedback. The pairing mode will be enabled for 10 minutes, after that the e-bike tracker powers off. 
Power OFF accessory, „disable FMN“	Locate the button on the left side of the eMotor cover. Turn the bike upside-down.  Press the button for 30 seconds. A confirmation chime will sound.
Enable „serial number lookup“	Locate the button on the left side of the eMotor cover. Quickly press the button twice. Two confirmation beeps will sound.
„Factory reset“	Locate the button on the left side of the eMotor cover. The bike should be turned upside-down and stationary. The button should be pressed ten times, and the tracker will peep after it has re-started. 



**eBike
Tracker
button**

If “battery almost empty” message shows in Find My App, please charge your eBike, as this will automatically charge the eBike-Tracker.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

corrateg

E-BIKE TRACKER MANUAL